



## INSTALLATION FAIRING BRACKET 214

1. Install the fairing according to drawing below.
2. Install the clear windshield with item 11.
3. Install items 2 and 3 with items 8, 9 and 10 on the fairing **without tightening**.
4. **Without tightening**, install items 1 on the handles of the ATV. Use items 4, 5, 6 and 7.


Note : In some case, you could need to loosen the brake handles to facilitate the installation.

5. Adjust the position for all the items.

Note : In some case, you may have to adjust the handlebar at the good angle to install the fairing correctly.

6. Make sure to tight the bolts sufficiently to prevent parts from vibrating loose.
7. Verify the clearance of the fairing by turning it. Make sure to clear the shifter and other accessories installed close to the handlebar of the vehicle.

**IMPORTANT:** Ensure you to keep enough space to operate the brake lever easily.

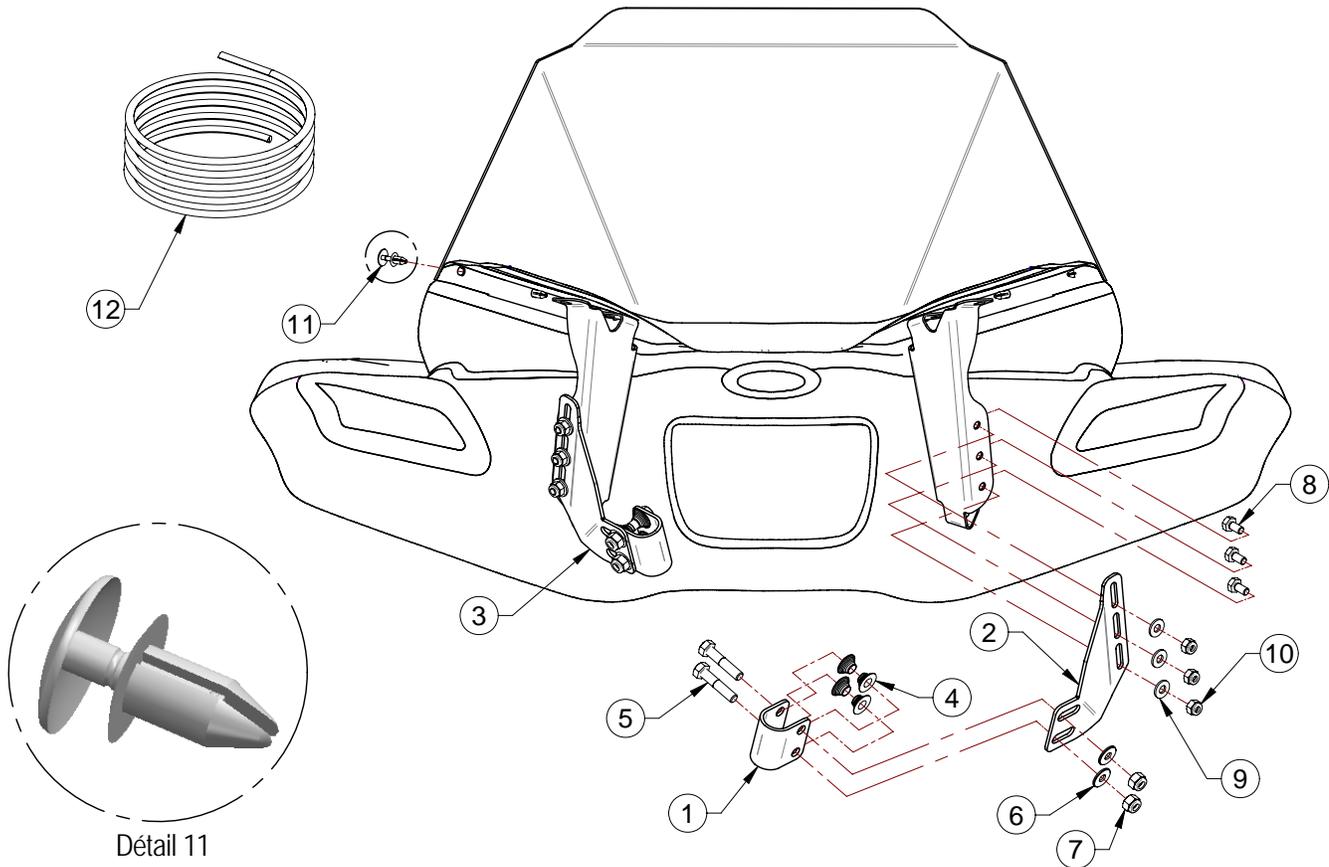

### Parts list

Ref.	Description	Item # (OEM)	Qty.
1	Handle support	04WB-001	2
2	Angles of fairing right	04WA-014D	1
3	Angles of fairing left	04WA-014G	1
4	Casing of support fairing	04BB-001	8
5	Hexagonal bolt 5/16-18NC x 1-1/2"	HB-5/16-18NCx1-1/2	4
6	Flat washer 1/4" USS white zinc	FW-1/4-USS	4
7	Hexagonal locknut with nylon 5/16"-18NC	HLN-5/16-18NC	4
8	Hexagonal Bolt 1/4"-20 NC x 1/2"	HB-1/4-20NCx1/2	6
9	Flat washer 1/4" SAE white zinc	FW-1/4-SAE	6
10	Hexagonal locknut with nylon 1/4"-20NC	HLN-1/4-20NC	6
11	Pushbutton to retain the windshield	Bouton 17.5MM	8
12	2600 mm of trim 8mm (available upon request)	TRIM8MM-COUPÉ 2600	option

**WARNING:** Windshields are for off-road use only.

When travelling at speeds exceeding 60Km/h, Please remove windshield.