



ADAPTER
INSTALLATION

1. -Remove the machine screws (FIGURE A) retaining the protective plate to the frame.
2. -Fasten the adapter (FIGURE B, # 1) onto the frame using two (2) U-bolts assembly 5/16" NC x 1 3/8" x 2 1/4" (FIGURE B, # 2), four (4) self-locking nuts HLN 5/16" (FIGURE B, # 4), four (4) Flat washers 1/4"NC(FIGURE B, # 3), two (2) Bolts M8 x 25 LG. (FIGURE B, # 5) and two (2) Bolts M8 x 30 LG. (FIGURE B, # 6).

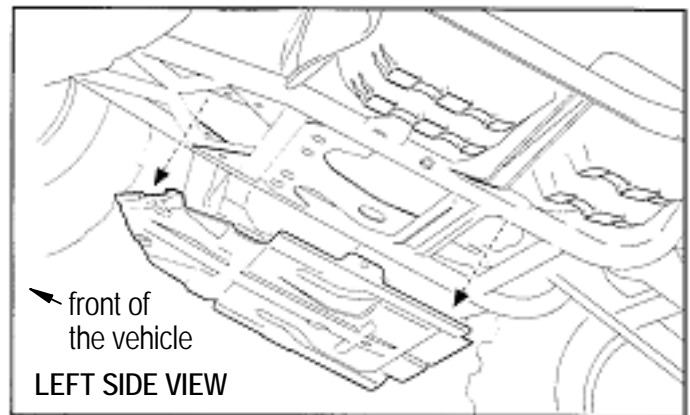


FIGURE A


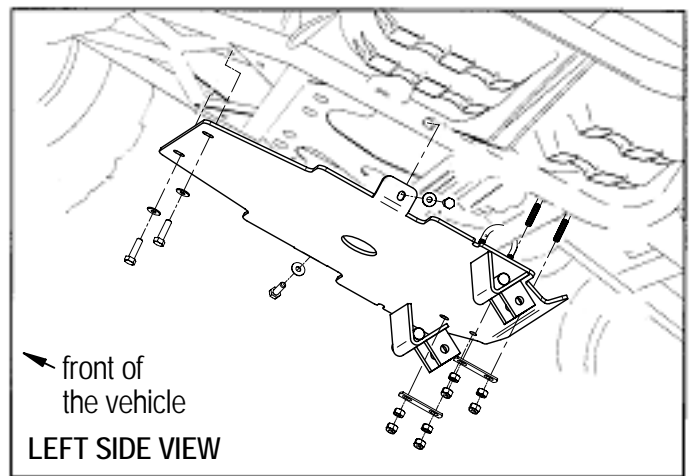


FIGURE B

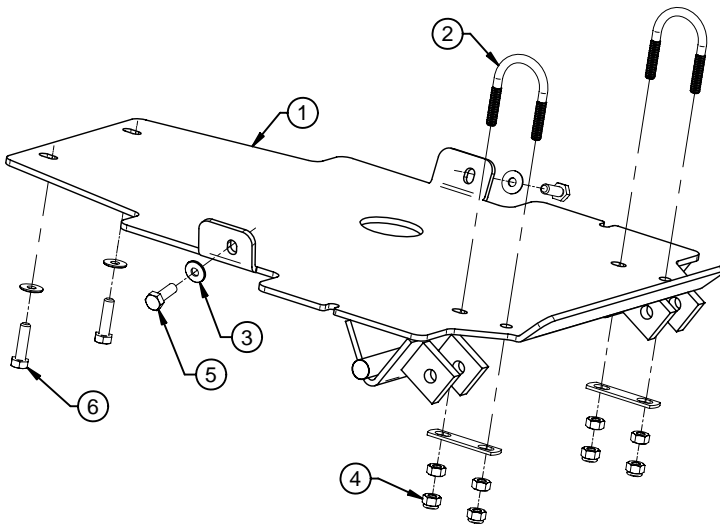

DÉTAIL FIGURE B

Parts list

Ref.	Description	Item # (OEM)	Qty.
1	Adapter	00PS-105	1
2	U-Bolt assembly 5/16" NC x 1 3/8" x 2 1/4"	UB5/16x1-3/8x2-1/4	2
3	Flat Washer 1/4" USS Zinc B	FW-1/4-USS	4
4	Look-nut 5/16" NC	HLN-5/16-18NC	4
5	Bolt M8 x 25 LG	HB-M8x1.25x25	2
6	Bolt M8 x 30 LG	HB-M8x1.25x30	2